




## Typical Mx1000 Installation on Fanuc 6

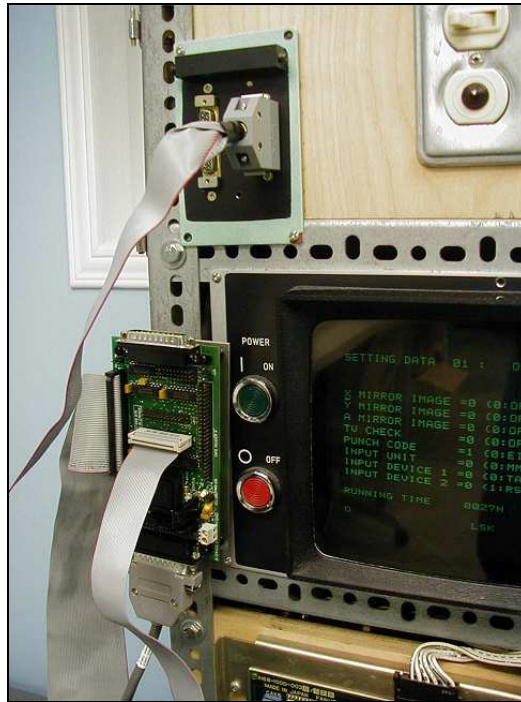

- Note Fanuc 6 Parameters on SETTINGS screen to enable TAPE as input mode and FACIT 4070 as punch.
- Also set Fanuc to ISO mode for all communications. Check manual for other communications parameters.



Note Parameter 2 bit 5 (1010 0000) is on to enable Facit 4070 Punch communications on a Fanuc 6MB



Serial Port of Computer is connected to left side of Mx1000